



EVO Manufacturing

Jeep Wrangler JLU

JL Rock Skins

EVO- 907





Before starting installation procedure please read <http://evomfg.com>Returns-Warranties-Shipping>

CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND KEEP FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS ABOUT THE PRODUCT CALL EVO MANUFACTURING. FAILURE TO FOLLOW GUIDELINES COULD RESULT IN MALFUNCTION OF PARTS OR INJURY. PLEASE HAVE A TRAINED PROFESSIONAL ASSIST WITH OR INSTALL ALL PRODUCTS. INSTALLING EVO MFG PRODUCTS OR KITS DEMANDS SPECIFIC KNOWLEDGE, TOOLS AND EXPERIENCE. GENERAL KNOWLEDGE OF HOW TO USE LATER SPECIFIED TOOLS AND/OR LIMITED EXPERIENCE WITH EVO MFG PRODUCTS MAY NOT BE ENOUGH TO PROPERLY COMPLETE THESE TASKS. SOME OF EVO MFG PRODUCTS MAY REQUIRE TWO OR MORE PEOPLE TO INSTALL SAFELY AND CORRECTLY. DO NOT ATTEMPT ALONE, ALWAYS ENLIST THE HELP OF TRAINED PROFESSIONAL WHEN NEEDED.

Notes: Set Up Before installation

This product requires permanent drilling of holes into the body of the Jeep and installing threaded inserts. Once process has started there is no going back.

Rivnuts/Nutserts are used in this installation. Installation tool for this is required and not included. Thread size 1/4 -20

Always wear approved safety equipment while performing the installation.

It is recommended that EVO MFG Skins are installed uncoated/painted first, then coat/paint and perform final assembly.

Keep all mounting bolts loose (installed but not torqued) we will torque later at the end of complete installation

READ BEFORE INSTALL:

It is generally a good idea to apply Loctite to all threaded bolts.


ALWAYS wear safety glasses and other approved safety gear when working on a vehicle.

All supplied bolts torqued according to chart at end of instruction.

It is recommended all installation be performed by a trained professional. Some modification may have to be done.

Parts included: Table below shows JLU Rock Skins

Description	#	Part #	Quantity
JL Rock Skin Driver	1	EVO-12349	1
JL Rock Skin Passenger	2	EVO-12350	1
Hardware	3	EVO-770084	1

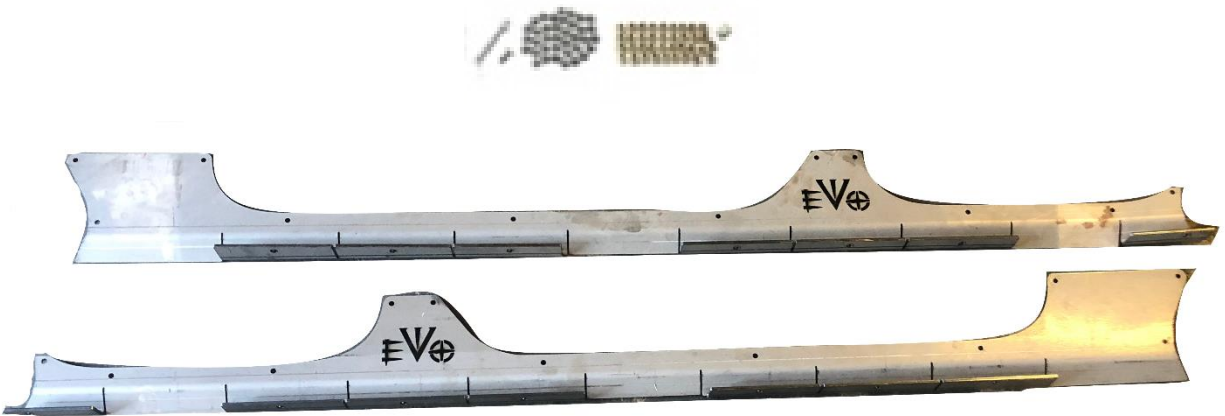



Recommended Tools:

- Drill and 25/64" drill bit



Safety Steps for installation

- For installing EVO MFG products always use wheel chokes to block rear tires from rolling.
- Always make sure you have everything necessary ready before install.
- If you have to, carefully lift front of vehicle by front frame rails extending suspension until tires leave the ground, place frame on approved jack stands for vehicle. Verify all lines/wires are not over extended.
- Remove tires if needed for easier install.
- Make sure to wear safety equipment (eye protection, hand protection, foot protection etc.) at all times during installation.
- Make sure all safety precautions have been taken.
- Always check and replace any part of vehicle that is worn or broken before starting install.
- Do not mix anything EVO with weaker alternatives.
- It is generally a good idea to apply liquid threadlock to all bolts.
- Tighten included hardware to torque specifications in bottom table unless it is otherwise specified, factory bolts should be torqued to factory Jeep specifications.





INSTALL

Park vehicle on flat ground,
parking brake engaged and
chalk wheels.

1. Clean both sets of EVO
MFG Rock Skins.
-



2. Hold EVO MFG Rock Skin to vehicle and align Rock Skin using body lines/door openings. Once you find a fit that works for you, mark the 4 centermost holes between the doors.

Before drilling it is the installers responsibility to verify fitment is acceptable. There is no turning back from here.

3. Once the skins are in your acceptable position, using the 4 marked holes in the Rock Skin drill through the outer sheet metal of body only using a 25/64" drill bit.

Step Drill recommended



4. Follow manufacturers tool procedure and install nutserts into 4 drilled holes.



5. Replace EVO MFG Rock Skin on the side of the vehicle and bolt to body (snug) in the 4 locations with installed nutserts. DO NOT overtighten bolts.
 6. Once Skin is bolted to body, press Skin flush to body, mark all other holes for drilling. Forward and rearward of center.
 7. Remove Skin from body. Follow tool procedure to drill holes and insert remaining nutserts.
-



8. Loosely install Rock Skin at all bolt locations and repeat previous steps on alternate side.
-



Lastly tighten down Rock Skin bolts.



After Install:

- Tighten all bolts securing purchased parts to specified locations.
- After completing installation using provided instructions, go through all steps again to make sure nothing was missed, not tightened or improperly assembled.
- Some components may need to be purchased separately.
- Check turn signals, headlights, fog lights (if applicable), taillights, blinkers and windshield wipers.
- Adjust mirrors, speedometer and headlights if needed.
- Make sure all gauges are fully operational.
- Drive the vehicle slowly for a couple minutes, looking and listening for abnormal noises while driving. After modification of a vehicle there will be differences in driving experiences and capabilities, be mindful of that.
- Inspect and Retorque all Bolts after 500 miles of completed installation and regularly thereafter.
- Some modification may be required.



Recommended Torque:

Size	Grade 2		Grade 5		Grade 8		18-8 S/S	
	Coarse	Fine	Coarse	Fine	Coarse	Fine	Coarse	Fine
#4*	-	-	-	-	-	-	5.2	-
#6*	-	-	-	-	-	-	9.6	-
#8*	-	-	-	-	-	-	19.8	-
#10*	-	-	-	-	-	-	22.8	31.7
1/4	4	4.7	6.3	7.3	9	10	6.3	7.8
5/16	8	9	13	14	18	20	11	11.8
3/8	15	17	23	26	33	37	20	22
7/16	24	27	37	41	52	58	31	33
1/2	37	41	57	64	80	90	43	45
9/16	53	59	82	91	115	129	57	63
5/8	73	83	112	128	159	180	93	104
3/4	125	138	200	223	282	315	128	124
7/8	129	144	322	355	454	501	194	193
1†	188	210	483	541	682	764	287	289