



**ADVENTURE
FURTHER®**

**2018+ JEEP JL/JT &
2021+ JEEP 4XE
OVERHEAD MOUNTING BRACKETS
(W/OPTIONAL A-PILLAR/COWL LIGHT MOUNTS)**

INSTALLATION INSTRUCTIONS

IMPORTANT:

Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



Parts Included:

- (1) - OVERHEAD MOUNTING BRACKET SET
- (1) - SILICONE GASKET SET
- (1) - WINDSHIELD HINGE BRACKET SET
- (1) - MOUNTING HARDWARE KIT
 - (4) - M8
 - (4) - M6 BHCS
 - (4) - M8 WASHERS
 - (4) - M6 SPLIT WASHERS

OPTIONAL

- (1) - A-PILLAR/COWL LIGHT TAB SET
- (1) - A-PILLAR/COWL LIGHT TAB MOUNTING HARDWARE KIT
 - (6) - M6 BUTTON HEAD CAP SCREWS
 - (6) - M6 FLAT WASHERS
 - (6) - M6 NYLOCK NUT


STEP BY STEP INSTALLATION INSTRUCTIONS

TOOLS NEEDED: T40 & T45 TORX | 4MM & 5MM HEX KET




1. INSTALLATION PREPARATION:

Peel and adhere the Silicone gaskets onto the corresponding brackets with a uniform 1/16" offset from the inside-edge of the bracket - evenly applying pressure to ensure complete adhesion. Apply Blue Thread-Lock onto all the supplied screws.

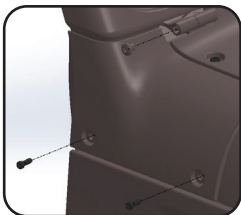

2. REMOVE STOCK HARDWARE:

Using a T40 TORX, remove the lower factory cowl mounting hardware. Using a T45 TORX, carefully remove the factory barrel nut, making sure not to chip the OEM Paint. Once removed, re-apply Blue Thread-Lock onto the threads inside the barrel nut.

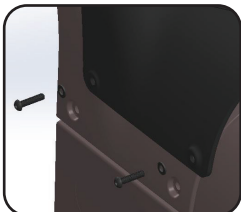

3. INSTALL OVERHEAD MOUNTING BRACKET:


Position the Overhead Mounting Bracket on the vehicle, and using the supplied M8 Screw (w/thread lock) and M8 Washer, secure the Overhead Mounting Brackets to the vehicle - leaving it a little loose to allow for some adjustments during final tightening.



4. INSTALL WINDSHIELD HINGE BRACKET:

Install the corresponding Windshield Bracket to the hinge with the Factory Barrel Nut. Using the supplied M6 Head Cap Screws & Split Washers, attach the Windshield Bracket thru the slotted holes onto the screw boss on the Overhead Mount. Once the Mount is in a desirable position, securely fasten the tighten all the hardware in reverse order. (Repeat on both sides of the vehicle)

(OPTIONAL)

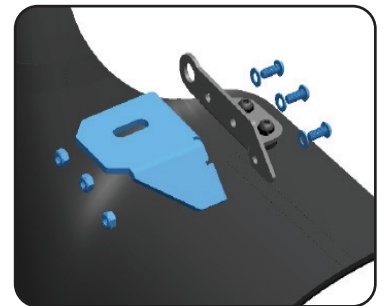

A-PILLAR/COWL INSTALLATION:

Using the supplied M6 Head Cap Screws, Flat Washers, and Nylock Nuts - Mount the corresponding A-Pillar/Cowl Light Tab to the Windshield Hinge Bracket.

Pro-Tip:

It's easier to do this step before Step #4 on the Installation of the Overhead Mount.

**YOU'RE DONE.
ADVENTURE FURTHER!**