




## Rear Bumper Template Instructions (76750, 76750D, 76651, 76651D, 76653)

**Step 1:** Raise the frame drill template **into** place by locating it on the rear frame cross member OE bumper outer mounting holes. **NOTE: The notch will be on the top and the drill template will be flipped for use on both the driver and passenger side.**

**Step 2:** Using the supplied drill template, making sure its straight mark the needed holes with a scribe or marker then proceed to drill the (4) holes in the frame using a 7/16" drill bit.

**CAUTION!** Be VERY CAREFUL not to drill into the fuel tank. Use a drill stop on the drill bit to prevent the drill bit from over penetrating.

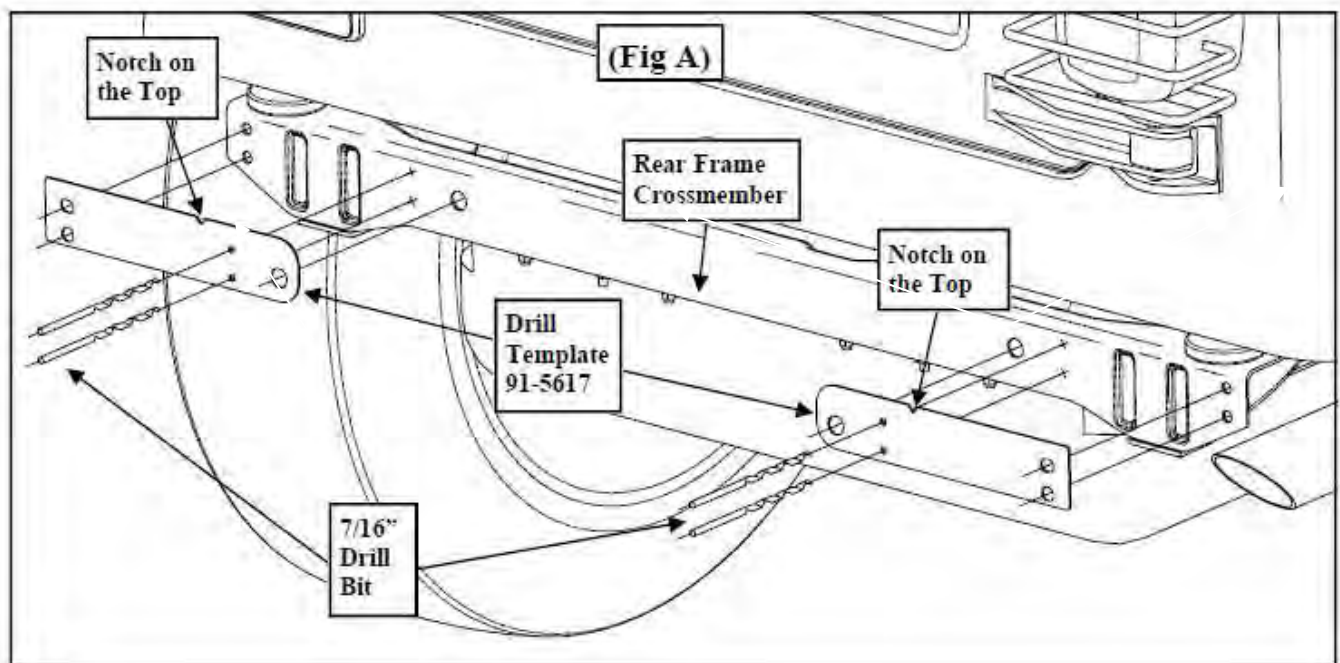

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220